 


Goblin®

# 3-in-1 cleaning system

Please read and keep these instructions

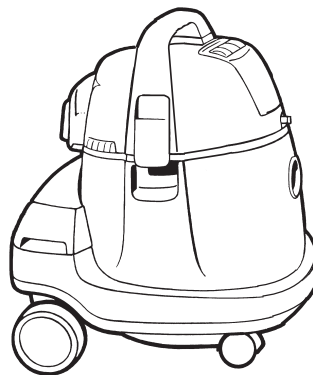

getting the best from your  
new 3-in-1...

**If your cleaner isn't performing as well as it  
should, please check**

- **Shampoo feed**

*If the shampoo/water solution is not feeding through check that the shampoo tank is filled and the shampoo tube is connected to both the machine and the shampoo tank, see page 10.*

*Only use defoaming shampoo. A bottle of shampoo is supplied, additional shampoo can be purchased by calling the above replacement parts number.*

- **Accessories**

*Some accessories must be stored inside the tank when you unpack the machine, please check and remove before first use.*

- **Filters**

*It is important that the cartridge and foam filters are cleaned regularly or replaced to allow air through the appliance.*

- **Blockages**

*Check the nozzle, tubes and hose for blockages.*

- **Dustbags**

*If using with the dustbag it is important to replace them, otherwise the performance of the cleaner will be impaired.*



[www.morphyrichards.co.uk](http://www.morphyrichards.co.uk)

## Important safety instructions

The use of any electrical appliance requires the following of common sense safety rules.

Primarily there is danger of personal injury and secondly danger of damage to the appliance and property. These are indicated in the instructions text by the following two conventions:

**WARNING: Danger of personal injury**

IMPORTANT: Damage to the appliance  
In addition we offer the following essential safety advice.

### Location

- Do not use or keep this product outside when it is raining.
- Do not store the appliance near hot ovens or heating appliances.

### Mains lead

- Do not allow the mains lead to become strained or run this appliance over it.
- If the electrical cable becomes damaged the complete cable assembly must be replaced. Do not attempt this task yourself, contact Goblin using the helpline number.

### Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.

### Dangerous substances

- Never use the appliance to vacuum hot ashes, broken glass, sharp objects or liquids.
- Never use in the presence of explosive liquids or vapours.
- Never pick up inflammable or poisonous liquids such as petrol, copier toner, or other volatile substances.
- Never pick up acids, asbestos or asbestos dust.
- Never use in the presence of explosive liquids or vapours.
- Never pick up hot or glowing ash, hot cigarette ends, hot coals or any other similar items.

### Other safety considerations

- Never use the appliance without the filter installed.
- Always disconnect the appliance from the mains supply after use or prior to cleaning or servicing.
- The appliance should never be left running unsupervised.
- Never modify the cleaner in any way.
- Repairs to electrical appliances are only to be undertaken by trained personnel. Unprofessional repairs can be dangerous for users.
- Use only genuine Goblin spare parts and accessories

## Electrical requirements

When using this appliance outdoors it should be additionally protected by a RCCB (Residual Current Circuit Breaker).

Please check that the supply voltage details given on the rating plate (located on the side of the motor housing inside the tank) are in accordance with your electricity supply.

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

**WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.**

Should the fuse in the 13 amp plug require replacement, a BS1362 13 amp fuse must be fitted.

## Introduction

Your new machine is a tough, powerful and extremely versatile Wet & Dry vacuum cleaner and carpet shampooer. In addition to normal household cleaning it can be used for:

- Liquids: spills and leaks, blocked sinks and soakaways, floods, ponds and cleaning out chest freezers after defrosting.
- Bulky waste: sawdust, wood shavings, plaster, sand, grinding dust, nails, screws, broken glass, soil in the potting shed.
- Shampooing: carpets, chairs, sofas and seats.

## How does your cleaner work?

### Wet and dry vacuuming usage

A heavy duty motor is located on top of the waste tank. The powerful vacuum lifts dirt and liquids through the hose which settle in the bottom of the tank. This arrangement protects the motor from liquids. A float shut-off valve cuts off the suction when the waste tank gets full of liquid.

A long-life cartridge filter is used when picking up dry waste to prevent fine particles being blown back out again. Paper bags can also be used for easier disposal.

Your Wet & Dry may sound louder than smaller conventional cleaners. This is normal for a heavy duty motor, designed to provide power and long life.

Tip: Do not press down when cleaning - let the powerful suction do the work.

### Shampooing usage

Water, mixed with a cleaning solution, is pumped deep into the fibres of a carpet via the shampoo nozzle. The water can then be sucked back into the waste tank along with the dirt and grime dislodged by the cleaning solution. Water can be pumped up to 2 metres above the machine so that stairs may also be shampooed.

These instructions first cover wet and dry usage, first section of this booklet; then how the shampooing facility, second section of this booklet.

 
 
 
 
 
## Wet & dry vacuuming usage

 
 
 
 
 
 
### Features

- ❶ Waste tank
- ❷ Motor housing
- ❸ Power switch
- ❹ Tank latches
- ❺ Castors
- ❻ Inlet
- ❼ Hose end
- ❽ Carrying handle
- ❾ Hose
- ❿ Curved handle
- ⓫ Extension tubes
- ⓬ Floor nozzle
- ⓭ Bolt
- ⓮ Screw
- ⓯ Wheel
- ⓰ Hub cap
- ⓱ Exhaust filter flap
- ⓲ Cable storage hook
- ⓳ Cardboard collar (on paper bag)
- ⓴ Tool storage cart
- ⓵ Cartridge filter
- ⓶ Bucket
- ⓷ Foam filter
- ⓸ Foam filter locking plate
- ⓹ Crevice tool
- ⓺ Upholstery tool

### Assembly


- ❶ Release the tank latches and lift off the motor housing as shown **D**.
- ❷ Remove any parts stored for transit inside the tank.
- ❸ Turn the tank upside down. To fit the wheels, slot a bolt through the centre of a wheel, push the bolt into the hole on the side of the cart and secure by inserting a screw **B1**.
- ❹ Now fit a hub cap **B1**. Do the same for the other wheel.
- ❺ Push the 2 castors into the holes and press firmly **B2**.
- ❻ Refit the motor housing ensuring that the switch is positioned above the inlet as illustration **A**. If the motor housing is fitted in any other position the latches will not lock.
  - Press the middle and not the bottom of the latch to lock.
- ❼ Assemble hose, extension tubes and nozzles as required, see **A**. Insert the hose end into the tank inlet and twist to secure.

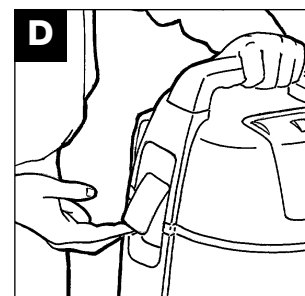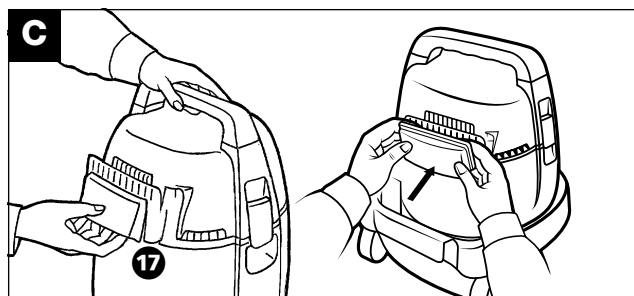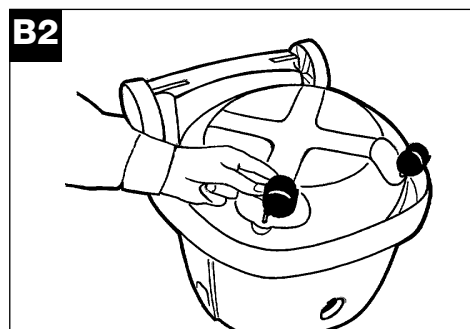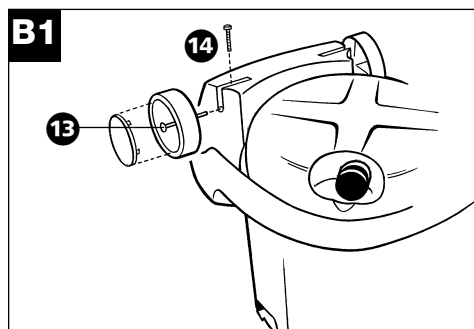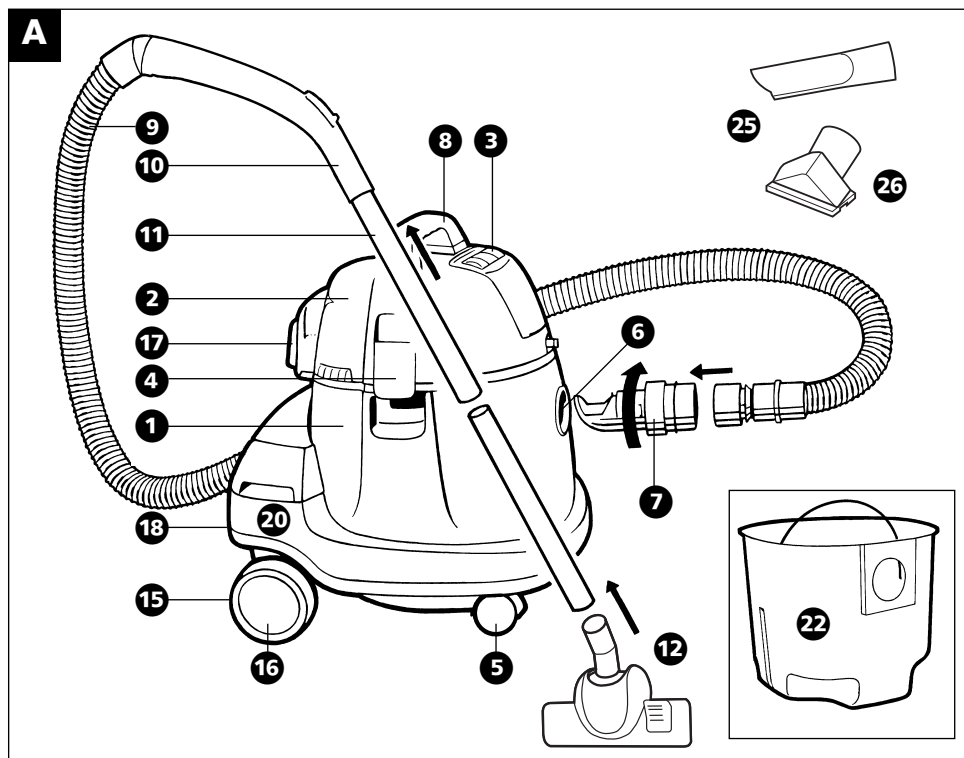

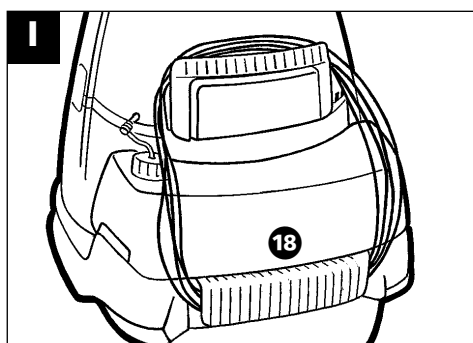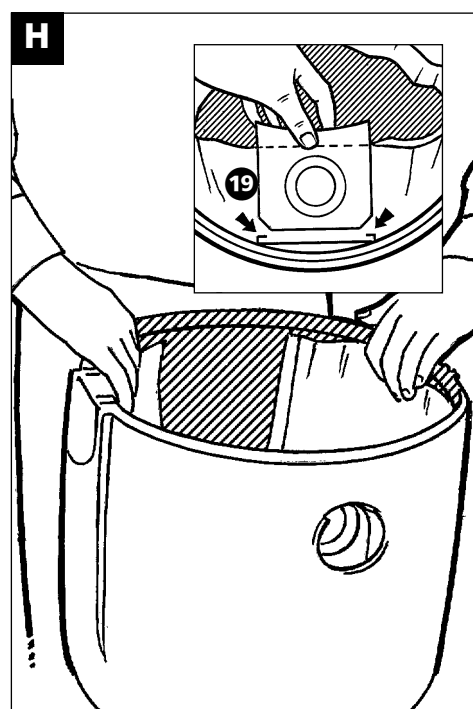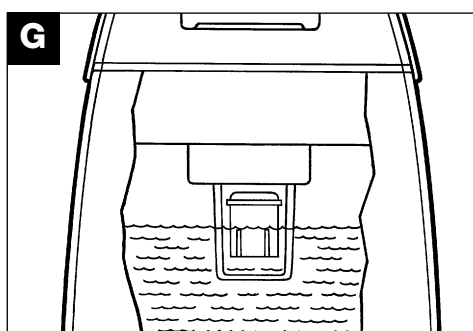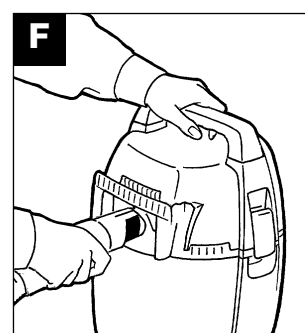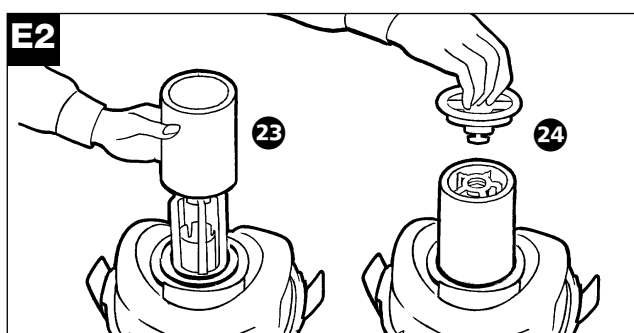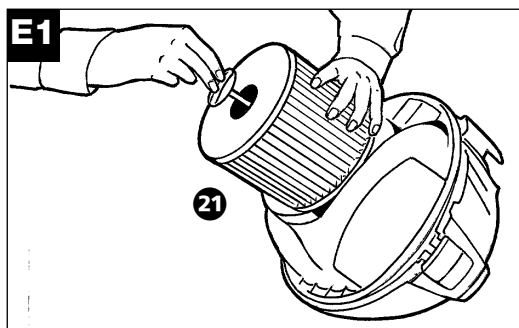

## Power controls

 This is a simple to operate rocker switch.  
**IMPORTANT:** Do not leave pump running dry.



**Vac on**  
**Off**  
**Pump on** (shampooing only)

## Dry usage

**IMPORTANT:** The cartridge filter must always be fitted when not picking up liquids. Failure to do so may cause damage by allowing dust and larger particles into the motor (and invalidation of the guarantee).

To clean the filter, remove it and brush the grooves with a soft brush, ensuring you don't damage the surface. Proper maintenance will give it a much extended life.

## Cartridge filter

Your cleaner features a removable heavy duty cartridge filter, designed to filter both large debris and fine dust. The cartridge filter will be one of 2 types and will already have been fitted in place under the motor housing **E1**. Type 1 is simply pushed firmly into place. Type 2 is a looser fit and has a locking nut to hold the cartridge filter in place - simply position the filter and twist the locking nut clockwise.

## Wet usage

When picking up liquids, the foam filter should be used. Remove the cartridge filter from underneath the motor housing. The foam filter should be pushed up against the base of the motor housing and secured by use of the foam filter locking plate. The locking plate is inserted beneath the foam filter and rotated clockwise until it locks into position **E2**. Refit the motor housing.

**IMPORTANT:** Always switch off and unplug from wall socket before removing or replacing the filters.

## Filtration

| Usage type  | Cartridge filter <b>E1</b> | Foam Filter <b>E2</b> | Paper bag <b>E3</b> | Comments   |
|---|----------------------------|-----------------------|---------------------|--|
| Wet pick-up shampoo (large volumes of liquids, floods, spills, blocked drains). | ×                          | ✓                     | ×                   | Never use the paper bag for wet pick-up.   |
| Dry pick-up (Household use, wood chips, sawdust, soil, sanding debris).         | ✓                          | ×                     | ✓                   | The paper bag is recommended for extra hygiene and convenient disposal of fine dust. The foam filter can be used in conjunction with the paper bag but should never be used alone for dry pick-up. |
| Wet and dry pick-up (Combination of both but not large volumes of liquid).      | ✓                          | ×                     | ×                   | Always use the cartridge filter for combination pick-up.   |

## Float shut-off

When the waste tank is full of liquid the float shut-off valve **1** automatically cuts off the suction which is indicated by a higher pitched noise from the motor. If this occurs:

- 1 Turn the motor OFF.
- 2 Switch off and disconnect electrical supply by removing the plug from the wall socket.
- 3 Raise hose to drain liquid back into the tank.
- 4 To minimise any back-flow of liquid keep hose in raised position until emptied.

**IMPORTANT:** Do not attempt to remove the float as this is important for safe performance.

If the cleaner overturns during use turn the motor off, return to upright and wait until the float falls free.

## Exhaust filter

In addition to the cartridge filter your cleaner also has a filter fitted to the exhaust. This is housed in the exhaust filter holder.

To access the filter remove the exhaust filter holder by inserting your fingers into the bottom of it and pulling **2**. The filter can then be removed and cleaned by either gently tapping or rinsing in water.

Once dry, the filter can be put back in the exhaust filter holder. This can then be replaced by first locating the bottom into position, and then pushing the top firmly until it clicks into position. Ensure that the exhaust filter holder has been fitted securely otherwise it may come off during use.

## Blower

Your cleaner may also be used to blow debris instead of vacuuming. To use the blower facility remove the exhaust filter holder as described under 'Exhaust filter'. Insert the hose end into the semi-circular location at the back of the cleaner. The hole in the hose end must be pointing to the right. Twist to secure **3**.

## Emptying

Switch off and unplug the cleaner from the mains supply. Unclip and remove the motor housing **4**. Empty the waste tank or bucket (if used) and refit motor housing.

## Crevice and upholstery tools

The crevice tool **25** can be used for difficult to reach areas.

The upholstery nozzle **26** is ideal for dry vacuuming sofas, chairs and stair steps.



## Dust collection bags

When collecting dry material, your cleaner can be used with or without a paper dust collection bag. Using a bag makes for easier collection and disposal and should be fitted as shown **II**.

With the hose end removed, slide the cardboard collar on the collection bag into the slots inside the waste tank and push the bag so that it fits around the outside of the tank. Bend the top of the cardboard collar back along the crease to allow easy fitment of the motor housing. Refit the hose end and then the motor housing. There is no need to remove the cartridge filter. Replacement bags are available.

- Do not use a bag for picking up nails, broken glass or other sharp objects as these may cause it to tear.
- Do not use a bag for wet pick up.
- Dust collection bags cannot be used when the bucket is fitted inside the tank.

## Cable storage

When not in use, the cable can be stored by wrapping it around the section above the exhaust filter flap and the cable storage hook at the back of the cleaner **II**.

# Shampooing instructions

## Features

In addition to the components previously mentioned under the 'Wet & Dry' section, the following will be used when shampooing:

- 23 Foam filter **E2**
- 24 Foam filter locking plate **E2**
- 27 Clean water tank
- 28 Filler cap
- 29 Filter
- 30 Feed pipe
- 31 Cleaning solution
- 32 Water inlet
- 33 Shampoo tube
- 34 Shampoo Nozzle
- 35 Tube connector
- 36 Shampoo jet
- 37 Upholstery shampoo nozzle

Remove the cartridge filter from underneath the motor housing (see 'Cartridge Filter' in the Wet & Dry section). Fit the foam filter in its place.

**IMPORTANT:** The foam filter must always be fitted when you are shampooing.

The filter should be pushed up against the base of the motor housing and secured by use of the foam filter locking plate. The locking plate is inserted beneath the foam filter and rotated clockwise until it locks into position **E2**. Refit the motor housing.

Slide the coiled shampoo tube and hose and extend to full length. **L**. Fit one end of the shampoo tube into the main housing connector **35** and the other end into the shampoo nozzle jet **36**.

## Controls

To shampoo press the rocker switch to the **II** position, the pump will be activated and water and cleaning solution will be forced down the shampoo tube.

**IMPORTANT:** Do not switch the pump on when there is no water in the clean water tank - this will damage the pump.

 
 
 
## Assembly

 
 
 
For best results, carpets to be shampooed should be vacuumed first using the standard floor nozzle.

After following the assembly instructions in the wet and dry section, remove the filler cap from the clean water tank and add up to 3.5 litres of water. Warm water may be used, but never hot. Add cleaning solution to the water following instructions on the bottle **J**.

Replace the filler cap ensuring the filter is on the end of the feed pipe (using without the filter may damage your machine and invalidate the guarantee). Fit the clean water tank into the tool storage cart. Push the nozzle on the other end of the feed pipe into the water inlet **K**.

Ensure the bucket is fitted inside the waste tank. It is possible to shampoo without using the bucket although it is far simpler to empty dirty water when the bucket is used. Fit the hose end into the waste tank after the bucket has been installed.

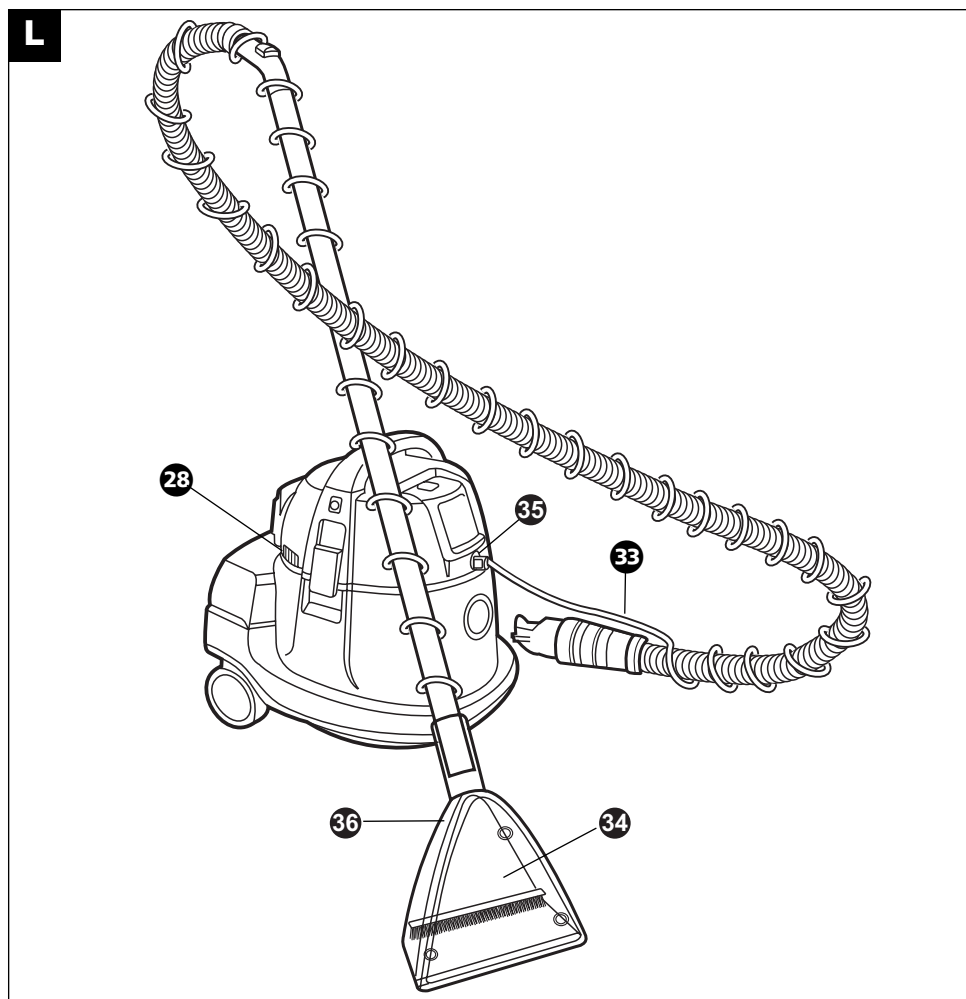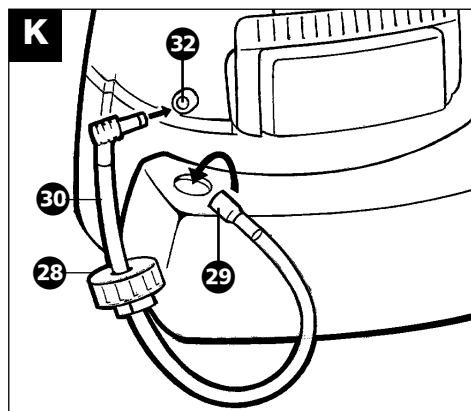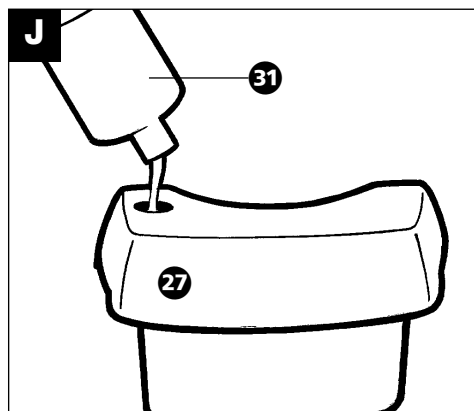

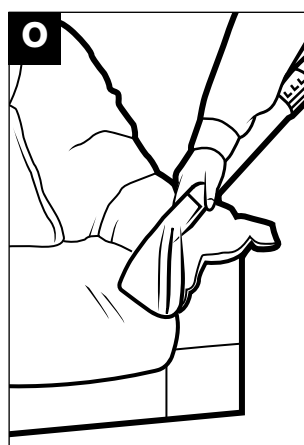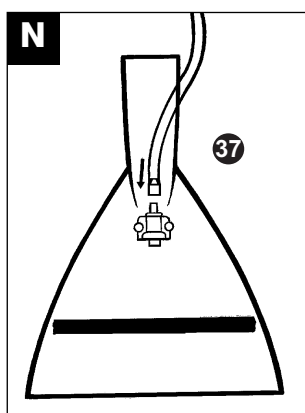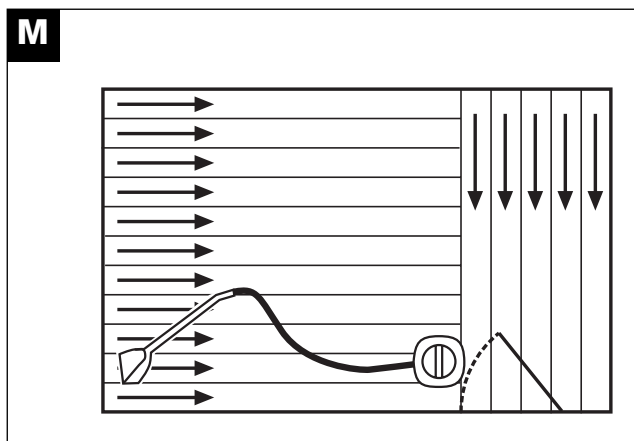



## Preparing to use

- 1** Ensure that the shampooing attachments have been correctly assembled as shown previously.
- 2** Check that there is water and cleaning solution in the clean water tank.
- 3** Remove furniture from the room to be cleaned, or move it away from the cleaning area.
- 4** Position the shampoo nozzle at a point furthest away from the vacuum cleaner where you intend to begin cleaning.
- 5** Plug in and press the rocker switch to the **II** position.
- 6** Apply shampoo to a strip of carpet and then switch the rocker switch to **I** to vacuum away the shampoo and the dirt.


## Cleaning tips

- Position the vacuum cleaner near the doorway to the room, extend the hose fully and work backwards towards the doorway. This avoids walking over the cleaned carpet until drying is complete.
- Work on a strip at a time. Apply shampoo and then vacuum away with backwards and forwards strokes before moving onto the next strip. 
- For particularly dirty patches, move the shampoo nozzle backwards and forwards over the area so that the brush in the shampoo nozzle scrubs the carpet.
- Avoid over wetting and, if necessary, pass over the area using suction only.
- For heavily soiled areas, it is advisable to repeat the cleaning process.
- Do not walk over newly cleaned carpet until it is fully dry.
- Do not replace furniture until the carpet is completely dry.

## Upholstery shampoo nozzle

The upholstery shampoo nozzle is ideal for cleaning sofas, chairs, stairs and car interiors. 

It can be attached directly onto the handle.

The shampoo tube fixes in the same way as the floor nozzle. 

## Emptying

It is advisable to empty the dirty solution after each tankful of water and cleaning solution has been used.

- 1** Switch off the machine and remove the plug from the mains.
- 2** Lift up the hose so that any dirty water remaining will drain back into the waste tank.
- 3** Remove the hose end from waste tank.
- 4** Remove the motor housing and lift out the bucket by the handle.
- 5** After emptying, refit the bucket and reassemble the machine.

## Storage

Prior to storage the following steps should be taken:

- 1** Empty the bucket and reassemble as described under 'Emptying'.
- 2** Remove the shampoo nozzle and, using the end of the extension tube, suck up some clean water so that the inside of the tubes and hose are cleaned.
- 3** Empty the bucket once more and wipe clean.
- 4** Remove the foam filter and rinse under a tap. Either refit the foam filter or, if the cleaner is to be used next for dry pick up, refit the cartridge filter.
- 5** Empty any solution remaining in the clean water tank. This may then either be re-fitted into the tool storage cart, or stored elsewhere so that tools may be stored in the cart.

## How to get the best from your shampoo system

- Always use AquaVac or Goblin cleaning solution. This contains the right amount of cleaner and defoamer.
- Only fill the clean water tank as directed.
- Do not over wet the area being cleaned. If this occurs pass over with suction only.
- Do not walk on carpets or replace furniture until fully dry.
- Clean out the tanks, bucket, hose and extension tubes after use.
- Do not leave solution inside the tank when not in use.
- Never use a cleaning solution without a defoaming agent included.

- The transparent shampoo nozzle can be cleaned by removing the four screws so that it can be taken apart. Wipe with a damp cloth. When re-assembling, ensure the screws are firmly tightened.
- If water and cleaning solution fails to come out of the shampoo nozzle, check the following:
  - is the rocker switch in the correct position?
  - is the clean water tank empty?
  - is the feed pipe connected to the water inlet?
  - is the tube connector attached to the shampoo jet?
  - is the correct shampoo being used?

## Helpline

If you have any difficulty with your appliance, do not hesitate to call us. We're more likely able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly:

- Name of the product
- Model number as shown on the underside of the motor housing (inside the tank).



## Your two-year guarantee

- **It is important to retain the retailers receipt as proof of purchase.** Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.                      Serial no.

All Goblin products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should take the appliance to your nearest service agent. A list containing details of your nearest service agent is included with your appliance but please contact the helpline quoting model number and serial number should you require further assistance. Repair or replacement of the product is subject to the exclusions set out below (1-6).

If you suspect a fault, follow the simple checks detailed below before returning the appliance or calling the helpline.

- Check the dust bag and filters for blockages.
- Check the hose and tubes for blockages.
- Check the plug is firmly in the socket and the supply is switched on.
- Make sure the socket is working by trying another appliance.

If for any reason this item is replaced during the two-year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original receipt or invoice to indicate the date of initial purchase.

To qualify for the two-year guarantee the appliance must have been used according to the manufacturers instructions.

Goblin shall not be liable to replace or repair the goods under the terms of the Guarantee where:

- 1 The fault has been caused or is attributable to accidental use, mis-use, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 Where the appliance has been used for hire purposes or non-domestic use.
- 5 The guarantee excludes consumables such as bags, filters and shampoo.
- 6 Goblin are not liable to carry out any type of servicing work, under the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.



For additional information on Goblin products [www.morphyrichards.co.uk](http://www.morphyrichards.co.uk)

*Goblin products are intended for household use only*

*Goblin has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.*

**Goblin®**

The After Sales Division,  
Registered address,  
Goblin, Mexborough,  
South Yorkshire, England, S64 8AJ

**Helpline** (office hours)  
UK 0870 060 2604  
Republic of Ireland 1800 409119